



1. Prepare the car for assembly. The car must be clean and dry.
2. Prepare the valance and the necessary tools.
3. Unscrew the screws from the side part of the bumper and from the rear part of the original spacer.
4. Apply and check the fit of the valance.
5. Mark the valance outline on the bumper and on the back of the original spacer with tape.

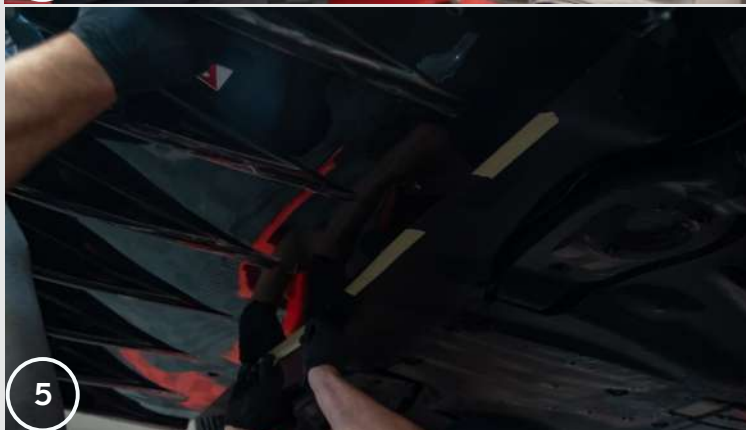

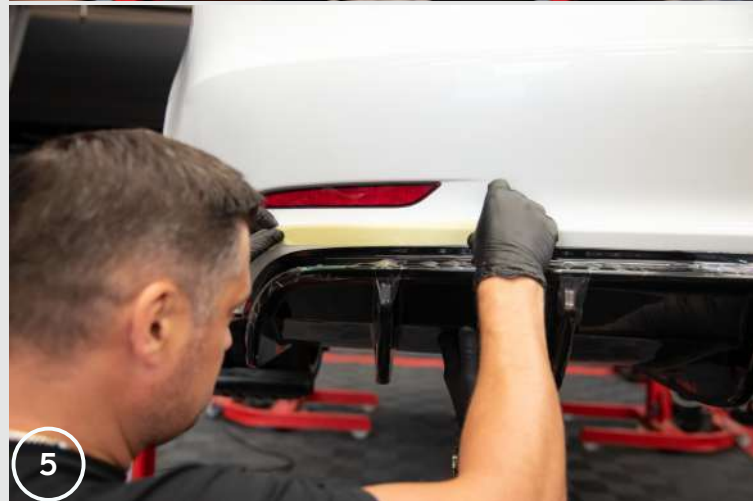



6. Thoroughly clean the gluing surface on the bumper.

7. Use an alcohol wipe to degrease the surface where the 3M tape will be located.

8. Remove the protective film from the inside pieces of tape on the valance and peel off small pieces of protective film from the tape on the front and back of the valance. Important: do not tear off the protective foil from the tape on the side pieces of the tape on the valance.

9. Apply the valance as marked. Stick the front and back parts of the valance by removing the protective foil from the tape and pressing.

10. Remove the protective film from the valance.







11. Drill the side valance pieces according to the location of the original holes in the bumper.
12. Remove the protective foil from the tape and glue the side valance elements so that the holes in the valance and the original holes coincide.
13. Screw the side elements to the bumper through the drilled holes.
14. Drill additional holes in the front and back of the valance for the clips.
15. Insert the clips into the drilled holes and snap them into place.
16. Done.

